

BRAKE PAD REPLACEMENT


Important steps to change brake pads and disc




4 STEPS CLAP

- 1 Clean thoroughly!
- 2 Lubricate properly!
- 3 Accessories must be replaced!
- 4 Please allow 200km for bedding in!

1 Clean all mating parts on wheel hub and caliper with Textar tools and brake cleaner. Check the disc run-out (max 0.07mm)!

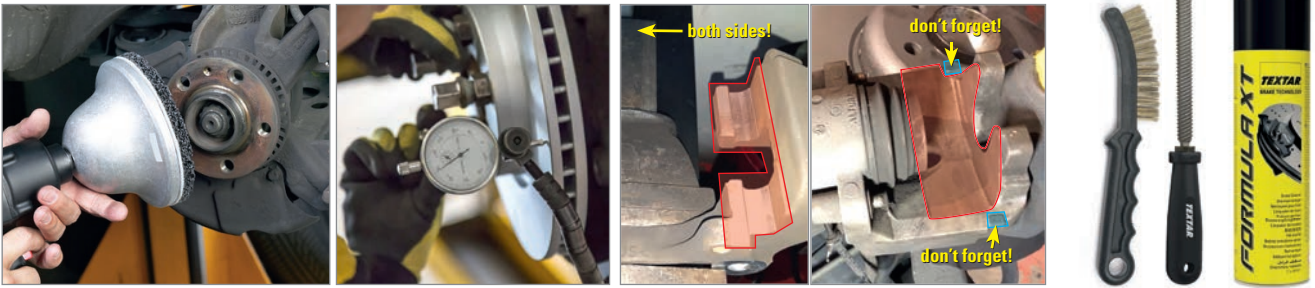

2 Lubricate with Textar CeraTec!

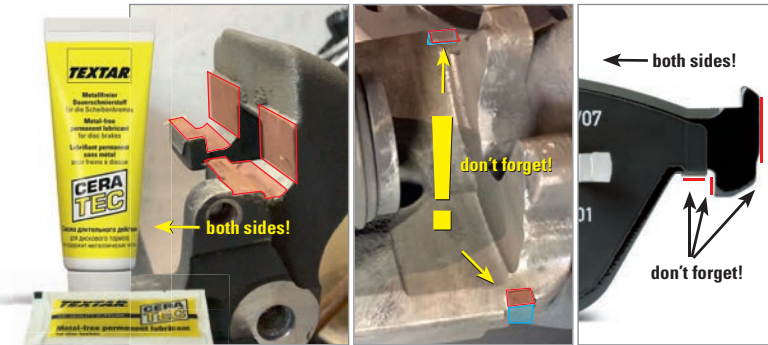


Lubricate with Textar Hydra Tec!



Note: Do not use copper paste!

3 New accessories must be used when new pads are being fitted!

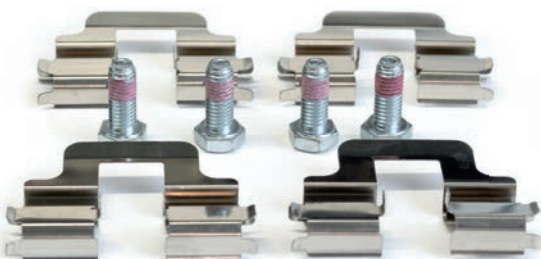

4 Very important step to further reduce squeal: Bedding at least 200km!

